




# CABINA A CREMAGLIERA SYSTEM SYSTEM RACK WALK-IN CLOSET

## MODULARITÀ MODULES

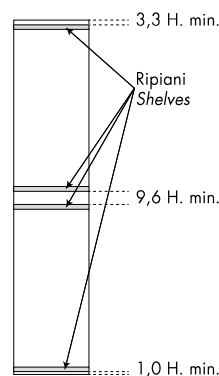

\* Solo per schienale ad angolo  
For corner back panel only

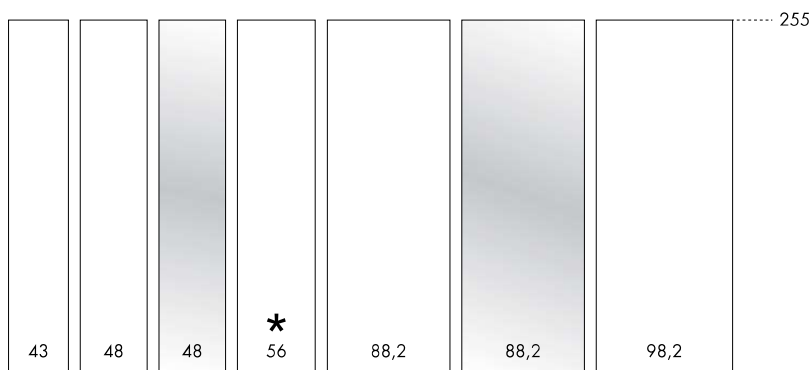

### POSIZIONAMENTO

Il posizionamento dei ripiani è a passo costante di 32 mm con distanza minima tra di loro di 96 mm. La partenza è di 10 mm dal filo inferiore del ripiano a terra. L'ultimo ripiano in alto ha posizione massima di 33 mm dal filo superiore.

### MONTAGGIO

Avviene fissando a muro i profili con cremagliera in alluminio e agganciando frontalmente gli schienali legno o specchio tramite apposite clips, pertanto non sono necessari ulteriori ingombri in altezza e larghezza. Prevedere comunque uno spazio laterale per l'inserimento delle cornici laterali di chiusura. La responsabilità delle operazioni di montaggio è totalmente a carico del cliente che deve valutare le caratteristiche strutturali della parete e utilizzare i sistemi di montaggio più idonei. Tutti i profili a cremagliera sono dotati di un piedino per regolare l'altezza max 20 mm. Le staffe di collegamento rimangono a vista nella faccia superiore del ripiano o del coperchio della cassettera. Per il montaggio della cabina si consiglia di considerare un ingombro superiore e laterale di 10 mm di tolleranza e di togliere il battiscopa. Nel caso in cui non si possa rimuovere il battiscopa si deve agire sul regolatore di profondità che ha un'escursione massima di scostamento dal muro di 8 mm. In fase di ordine specificare sempre le misure esatte della parete.

### PULIZIA

La pulizia dei materiali va effettuata unicamente con un panno umido e detergente neutro, asciugando con un panno morbido. È vietato l'uso di prodotti a base di solvente o abrasivi. Le superfici poste a contatto prolungato con corpi caldi, acqua o altri liquidi si possono danneggiare. La Cabina armadio è destinata solo ad un uso interno.

### POSITION OF SHELVES

The shelves can be fixed at constant, 32 mm intervals with a minimum distance between them of 96 mm. The bottom shelf must be 10 mm above the bottom edge of the floorstanding baseboard. The top shelf can be fixed at a maximum height of 33 mm from the top edge of the unit.

### ASSEMBLY

The unit is assembled by fixing the rack profiles to the wall and attaching the wooden back panel or mirror panels to them using clips. No other hardware is required at the top or sides. Make sure you leave some space on the sides to add the side frames. Assembly is the responsibility of the customer who must check the structural features of the wall and use the most suitable assembly devices. All the rack profiles have feet that can be adjusted to a maximum height of 20 mm. The connecting brackets remain exposed on the upper surface of the shelf and on the top of drawer units. To assemble the walk-in unit it is advisable to leave a gap at the top and sides of 10 mm and to remove the skirting. If it is impossible to remove the skirting, use the depth adjuster that can be set at a maximum distance from the wall of 8 mm. Please specify the exact measurements of the wall when ordering.

### CLEANING

The materials can be cleaned using a damp cloth and a neutral detergent and dried using a soft cloth. Never use solvent-based or abrasive products. Hot objects, water or other liquids may damage the surfaces if placed in prolonged contact with them. The walk-in unit has been designed for indoor use only.